

VT-2000

Secondary Surveillance Radar Transponder Mode-S

User manual

Add this manual to the flight instruction manual of your aircraft

GARRECHT
Avionik GmbH



© 2007-2012 - Garrecht Avionik GmbH, 55411 Bingen/Germany

Table of content




Record of Revisions.....	2
Table of content.....	3
Preface	4
1. Switching ON and OFF.....	5
2. Normal Operation	5
2.1. Entering a Squawk (Reply Code).....	6
2.2. Entering a Standby Squawk.....	7
2.3. Selecting a Mode	8
2.4. IDENT Function.....	8
2.5. Additional Functions.....	9
2.5.1. Stop Watch.....	9
2.5.2. Altitude Monitor.....	10
2.5.3. Count Down.....	11
2.6. More Settings.....	12
2.6.1. Rudiments of Operation:.....	12
2.6.1.1. Menue Navigation	12
2.6.1.2. Value Input.....	13
2.6.1.3. VT-2000 Menu Tree.....	14
2.7. Setting Up Flight Specific Data.....	18
2.7.1. Flight id / aircraft registration / company callsign.....	18
3. Warnings / Error messages	19
3.1. Failure Messages.....	19
3.2. Warnings.....	19
3.2. Warnings.....	20
3.3. Error Codes.....	21

Preface

This manual contains operating instructions for the Mode-S transponder VT-2000. It should be read before operating your VT-2000 transponder. Please contact your supplier in any case of doubt or for additional questions.

Safety symbols:

The following symbols and terms are used in this manual:

	<p>Warning <i>Warning statements identify conditions or practices that could result in injury or loss of life</i></p>
	<p>Caution <i>Caution statements identify conditions or practices that could result in damage of this product or other property.</i></p>
	<p>Important note: <i>Indicates important or usefull information. It is strongly recommended to read, understand and follow the statement.</i></p>





The pilot is always responsible to respect all legal aspects and obligations resulting in operating this installed VT-2000



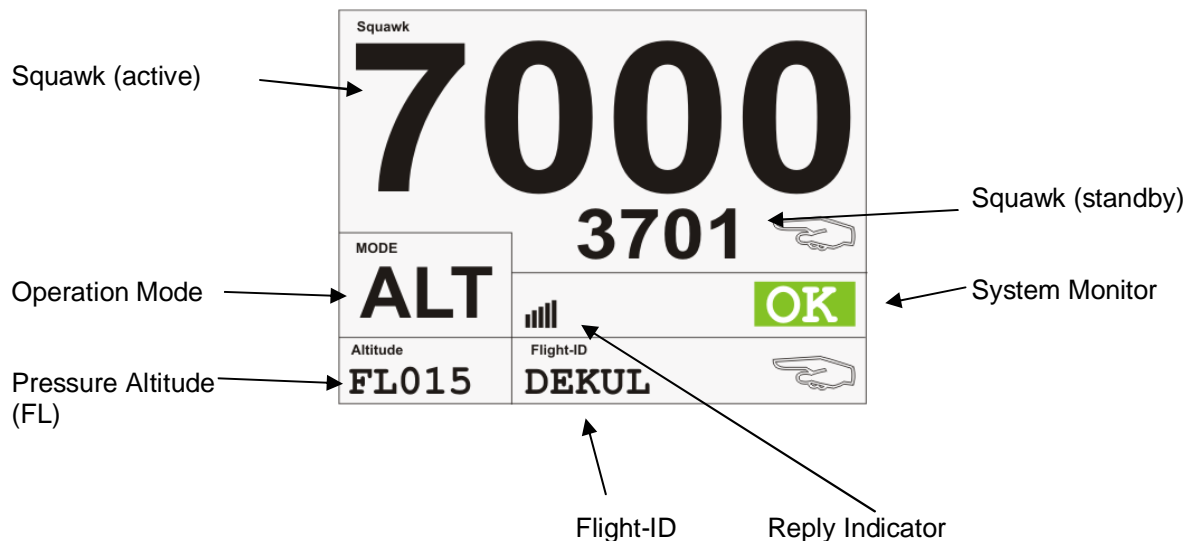
To prevent damage caused by overvoltage or voltage spikes, always switch off the system when starting or stopping the aircraft's engine. Damage caused by spikes or overvoltage can be determined by the manufacturer and are not covered by the manufacturer's warranty.

1. Switching ON and OFF

	<p>Switch ON the VT-2000 by Pressing one of the keys SBY, GND, ON, ALT. The unit starts in the selected mode.</p> <p>Press key OFF and hold until the units switches off.</p>
	<p>Startup screen after powering on the device.</p> <p>The screen informs about the firmware version installed in the <u>control unit</u>.</p> <p>NOTE: Firmware and FPGA version information can be found in Main Menu.Setting.Info of the device</p>

2. Normal Operation

When in normal operation mode, the following screen is shown by the system:



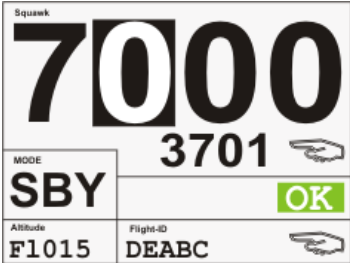


Notes:

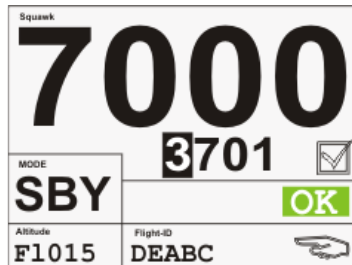
- If no Mode-S Adress has been entered, the Flight-ID is replaced by a blinking text **No Mode-S**. The system operates in Mode-A/C then
- The pressure altitude refers to 1013,25 hPa and is displayed in flightlevels (FL)

2.1. Entering a Squawk (Reply Code)



Use the keypad for entering the desired squawk

	<ul style="list-style-type: none"> • After pressing the first numeric key, the selected entered value will be indicated in the first position of the squawk string. The cursor jumps to the next position automatically. • Undesired inputs can be changed by pressing CLR. The Cursor jumps one digit to the left and the wrong input can be overwritten by entering the correct value. • After inputting the last digit, the squawk is complete and will be activated immediately. • Pressing VFR invokes the presetted VFR squawk. The previous entered squawk will be moved into the standby squawk. • Pressing  toggles between active and standby squawk.
	


2.2. Entering a Standby Squawk



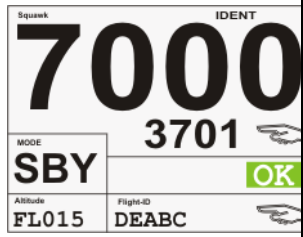
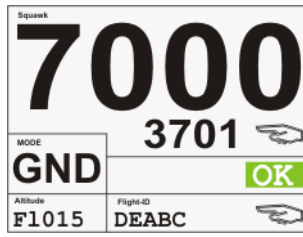
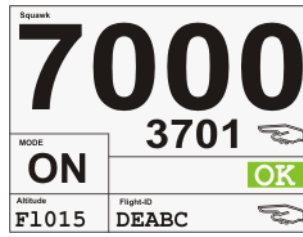
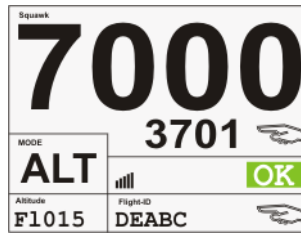
Enter the standby squawk using the VT-2000 keypad.

- Activate the edit mode by pressing the upper softkey. The symbol  near the standby squawk changes to .
- Enter now the desired standby squawk using the keypad.
- Undesired inputs can be changed by pressing **CLR**. The Cursor jumps one digit to the left and the wrong input can be overwritten by entering the correct value.
- After inputting the last digit, the squawk is complete and will be activated immediately.
- Pressing  toggles between active and standby squawk.

2.3. Selecting a Mode



Select the desired mode by pressing one of the keys **SBY**, **GND**, **ON**, **ALT**.

			
Standby Modus	On-Ground Modus	ON-Modus	ALT-Modus

Display	Mode	Description
SBY	Standby	Standby - System is switched on, no replies or squitters will be sent.
GND	Ground	Mode-A/C/S intermode All-Calls will not be replied
ON	System operating, no alticode will be replied	Selected reply code will be replied for Mode-A/C interrogations, altitude information is set to zero, squittering is enabled, Mode-S interrogations will be replied. Switch to this mode only if required by ATC .
ALT	System operating, alticode will be replied	Selected reply code will be replied for Mode-A/C interrogations, altitude information is set to indicated value, squittering is enabled, Mode-S interrogations will be replied (standard operation mode)



If the airframe provides an Weight-on-Wheels switch and the transponder has been configured properly, manual switching to ON or ALT mode is not possible while aircraft is on ground.

2.4. IDENT Function

Pressing **IDT** invokes the ident mode for 18 sec.





Press the ident key only if requested by ATC!


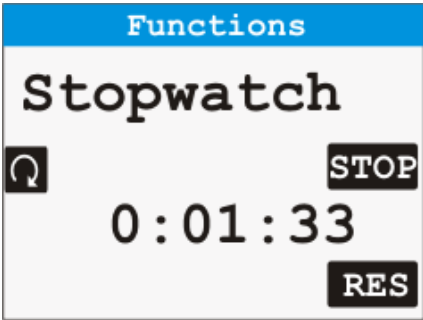
2.5. Additional Functions

The VT-2000 provides some useful features (stop watch, countdown and altitude monitor)

Press **PGE** to enter the first page of this additional functions.

Press  to switch between the different function pages (softkey ).




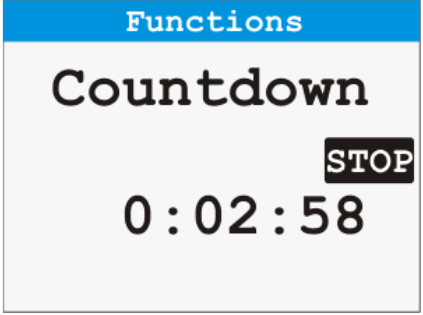
2.5.1. Stop Watch

	RUN starts the stop watch
	STOP stops the stop watch
	RES resets the running or stopped watch to 0:00:00 zurück

2.5.2. Altitude Monitor

<p>The screen displays 'Functions' at the top, 'AltMonitor' in the middle, and 'Inactive' at the bottom. There is a 'REF' button on the right and a 'GO' button at the bottom right.</p>	<p>REF sets the current pressure altitude for reference and activates the altitude monitor</p> <p>Deviations from the preset reference are indicated optically and audible</p> <p>STOP stops the altitude monitor</p> <p>GO resumes the altitude monitor function with the stored reference</p>
<p>The screen displays 'Functions' at the top, 'AltMonitor' in the middle, and 'level' above 'F1050' at the bottom. There is a 'REF' button on the right and a 'STOP' button at the bottom right.</p>	<p> decreases reference altitude by 100ft.</p> <p> increases reference altitude by 100ft.</p> <p><i>Example:</i> Alt - monitor active. Current reference: FL 050 No deviation (=level)</p>
<p>The screen displays 'Functions' at the top, 'AltMonitor' in the middle, and 'above' above 'F1050' at the bottom. There is a 'REF' button on the right and a 'STOP' button at the bottom right. Three downward-pointing chevrons are to the left of 'F1050'.</p>	<p>Alt - monitor active. Current reference: FL 050 Deviation: 300 ft above reference (=above) One ^ indicates a 100ft deviation. The chevron's direction commands: Sinken</p>
<p>The screen displays 'Functions' at the top, 'AltMonitor' in the middle, and 'below' above 'F1050' at the bottom. There is a 'REF' button on the right and a 'STOP' button at the bottom right. Three upward-pointing chevrons are to the left of 'F1050'.</p>	<p>Alt - monitor active. Current reference: FL 050 Deviation: 300 ft below reference (=below) The chevron's direction commands: Climb</p>

2.5.3. Count Down


	<p>Setting the countdown initial value:</p> <p> increases the initial value by 30 sec.</p> <p> decreases the initial value by 30 sec.</p>
	<p>Press and hold the keys to increase the step size to make inputs more comfortable</p> <p>RUN starts the count down</p> <p>STOP stops the count down</p>

2.6. More Settings

Pressing **PGE** twice in the normal operation screen enters the main menu. Some unprotected setting can be made up to the pilot's preferences.

2.6.1. Rudiments of Operation:



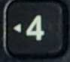
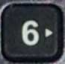




2.6.1.1. Menue Navigation

	<p>Navigate through the menus using the VT-2000 keyad.</p> <p>↑ moves the cursor up</p> <p>↓ moves the cursor down</p> <p>SEL selects the inverted menu item</p> <p>EXIT leaves a submenu</p>
---	---

2.6.1.2. Value Input



Handle input fields as follows:

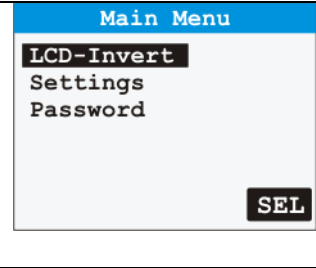
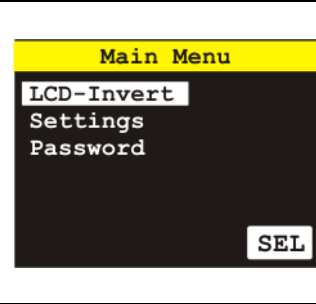
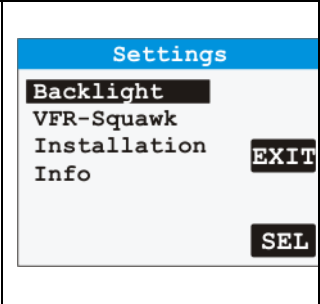
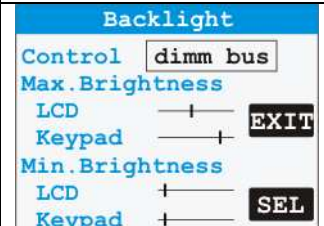


- Select a field using  or .
- **SEL** activates the edit mode for the selected field. Editable fields are displayed in inverted style.
- If the first digit of a string is inverted, use the  or  to navigate to the desired position.
- Change values in the string using  or .
- If the entire string is displayed inverted, no single digits can be changed. Use  or  to select from preset values.

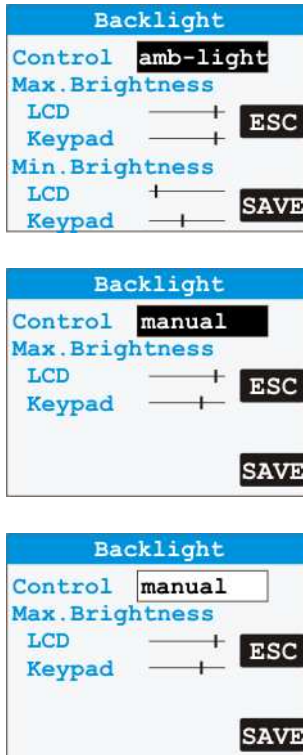
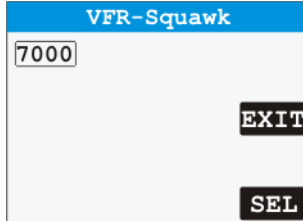
ESC quits the edit mode without saving changes

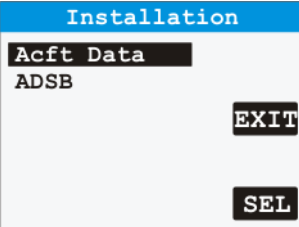
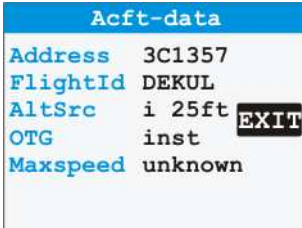

SAVE saves the value entered in the field and quits the edit mode.



EXIT leaves a sub menu

2.6.1.3. VT-2000 Menu Tree

 <p>Main Menu LCD-Invert Settings Password SEL</p>	<ul style="list-style-type: none"> • LCD-Invert: switches manually between day mode and night mode • Settings: invokes submenu settings • Password: invokes password page for extended setup 		
 <p>Main Menu LCD-Invert Settings Password SEL</p>	<p>LCD night mode</p>		
	 <p>Settings Backlight VFR-Squawk Installation Info EXIT SEL</p>	<p>Submenu Settings:</p> <ul style="list-style-type: none"> • Backlight (Control of LCD and keypad backlights) • VFR Squawk (Presettings for VFR-Taste) • Installation • Info (shows info screen / firmware version information) 	
		 <p>Backlight Control dimm bus Max. Brightness LCD + - EXIT Keypad + - Min. Brightness LCD + - SEL Keypad + -</p>	<p>Submenu Backlight.</p> <p>Select the the desired backlight control using the  or </p> <p>Possible selections:</p> <ul style="list-style-type: none"> • Dimm bus: Brightness control via aircraft dimm bus

			<ul style="list-style-type: none"> • Amb-light: Brightness control via internal sensor • Manual: Manual brightness control <p>NOTE Calibrations for dimm bus and amb light settings is possible via system setup (password protected).</p> <p>Please Consult your avionics workshop for assistance.</p>
			<p>Submenu VFR Squawk</p> <ul style="list-style-type: none"> • Sets up the VFR squawk, that can be invoked pressing the VFR.

			<p>Submenu Installation (READ ONLY)</p> <ul style="list-style-type: none"> • Acft Data: Shows aircraft specific data • ADSB: Shows ADS-B specific data <p>NOTE: Settings are password protected (=read only) in normal operation mode. Please consult the VT-2000 installation manual or your avionics workshop for modifications.</p>
			 <p>Address: 24-Bit Mode-S Adresse Flight-ID: Aircraft registration or company Callsign AltSrc: Altitude source OTG: Configuration of OTG (on the ground) switch Maxspeed: Aircraft max. cruising TAS</p> <p>Please consult the installation manual for detailed information.</p>
			 <p>Category: Aircraft category A1090-In: ADS-B 1090 in capability installed in the aircraft L/W Code: informatio about aircraft dimension</p> <p>Please consult the installation manual for detailed information.</p>

		 <p>VT-2000 GARRECHT Avionik UI: v2.06 XP: v170 FPGA: v11</p>	<p>Submenu Info:</p> <p>Shows version information about control unit, central unit and FPGA.</p>
 <p>Password Key FAAB62DA Password 000000 EXIT SEL</p>	<p>For extended setup or maintenance, a password is required. Consult the VT-2000 installation manual for password and instructions for extended setup.</p> <p>The key is required for generating passwords for maintenance.</p>		

2.7. Setting Up Flight Specific Data

2.7.1. Flight id / aircraft registration / company callsign

A Mode-S transponder broadcasts the flight id (FID, company callsign for commercial aircraft or the aircraft registration for smaller private operated aircraft).



The flight id may be changed if required. Usually the FID is the callsign of your aircraft unless field 7 of the flight plan contains other data. Always check before each flight if your flight id has been set correctly.

Follow these steps to set the flight id / aircraft registration:

	<ul style="list-style-type: none"> • Set the unit to standby (SBY) mode • Press the lower softkey • The symbol changes near the Flight-ID changes to <input checked="" type="checkbox"/>. • Use or to navigate to the desired position and change the values using or . • Quit the edit mode by pressing the lower softkey again. The Symbol <input checked="" type="checkbox"/> changes to .
<p>Flight-ID in edit mode</p>	



Please consult the VT-2000 installation manual for instructions how to set up aircraft specific parameters.

3. Warnings / Error messages

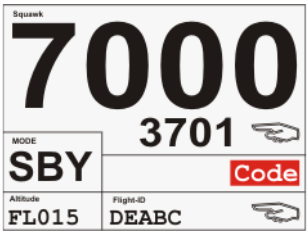
System failures will be detected by the internal self test function that is performed continuously.

Failures are detected malfunctions, which can not be eliminated by the user. Warnings are conditions, which may be followed by a failure. Warnings can be eliminated by the user under several conditions.

Failures and warnings will be indicated by a visual and audible signal.

If restarting the unit continues to generate the same error, please contact your avionik shop or your dealer.

3.1. Failure Messages

 <p>Code indicates a failure code.</p>	<p>In case of detecting a severe failure, the system will be switched into Standby (SBY) mode. All system operating will be terminated to prevent damages to system components and an audible alarm appears. Quit the audible alarms by pressing CLR. Dadurch wird verhindert, daß Systemkomponenten beschädigt werden oder das Flugsicherungssystem gestört wird.</p> <p>The system monitor indicates a failure code red underlayed.</p> <p>In case of failure, try to restart the system by pressing ON or ALT. If the failure is still present, the system returns into failure mode.</p>
---	---

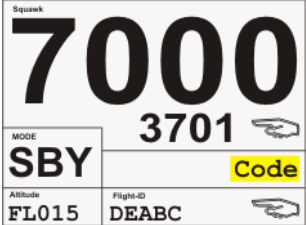


If a system failure has been detected by the system, always inform ATC, if you are flying in a transponder mandatory zone or other airspace, where a transponder is required. Never try to find the reason for a system failure or warning during the flight!!!

3.2. Warnings

The system warns the pilot if malfunctions have been detected that could lead to a severe failure. It is up to the pilot to eliminate these conditions.

Warnings are indicated in case of undervoltage or operating the system out of the certified altitude range.

 <p>Code indicates a failure code.</p>	<p>In case of warning, the system shows a yellow underlined warning on the LCD screen. Additionally, a frequently repeated audible signal occurs. Both can be terminated by pressing CLR.</p> <p>The system continues operation, but it may be limited.</p> <p>If an error of the altimeter unit is detected or the system is operated out of the certified altitude range, the replied altitude will be set to zero (same as mode ON)</p>
--	--



If a system failure has been detected by the system, always inform ATC, if you are flying in a transponder mandatory zone or other airspace, where a transponder is required. Never try to find the reason for a system failure or warning during the flight!!!

3.3. Error Codes

The following table shows the meaning of displayed failure and warning codes. Failures marked with an * may be caused in the system installation. Other failure or warning codes are caused by internal malfunctions. In this case the system needs to be repaired by an authorised repair shop.

Code		Description	Possible reason
SQUIT		Squitter Error	Malfunction in transmitter module
VSUP		Supply voltage low	Supply voltage low
ANT	*	Antenna failure	Bad antenna or antenna cable
PRSS		Pressure sensor failure	Internal malfunction of pressure sensor
COMM	*	CAN bus communication error	Short in CAN-bus or internal malfunction
TXPL		Transmitter PLL failure	Internal malfunction PLL unit
FPGA		FPGA checksum failure	Internal malfunction FPGA
V36		36 V power supply failure	Internal malfunction power supply 36V